


# SWAT Physician Vest

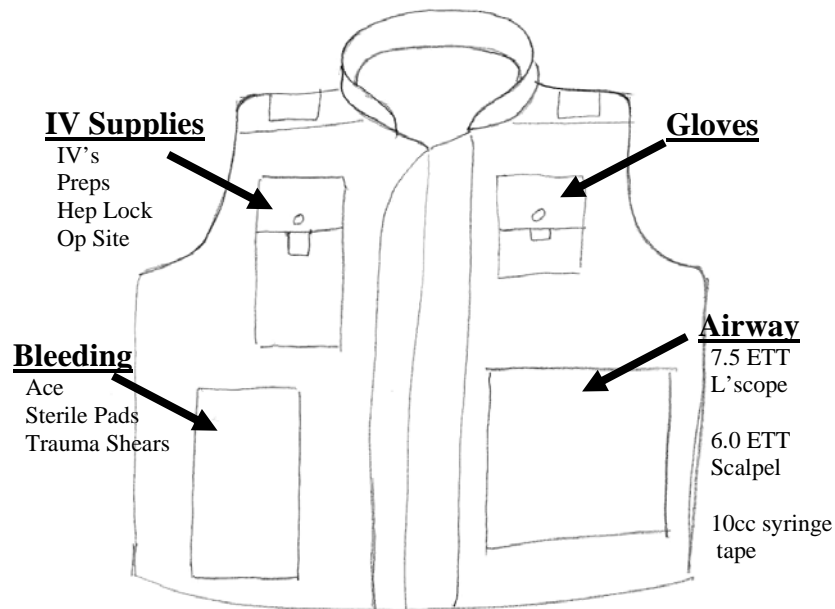

## Back of Vest:

Bag/Valve/Mask  
(250 cc 7.5% saline – to be added later)

## Remember! Far forward priorities:

1. Maintain Airway
2. Relieve Tension PTX
3. Stop major bleeding
4. Extract to safety